Lume cube

For product details, instructions, and further information, scan the QR code below with your smartphone.



Start Here

Follow these steps below to operate your new Lume Cube Panel Pro




Lume Cube App


- Download the Lume Cube app on the App Store or Google Play™.

 If you already have the app, make sure you have updated to the latest version.

 Learn more lumecube.com/app
- Open the app and sign in.
 If you have never signed in create an account.
- When Panel Pro is OFF, hold the Blue Button for 8 seconds. The light will quickly turn on (continue to hold down the Blue Button) for 8 seconds, the Bluetooth® symbol will appear. Find the device on your App & begin using.

Panel Pro

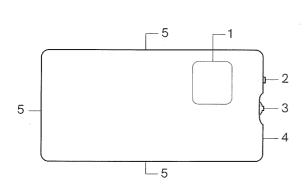

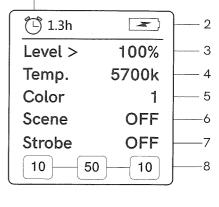

- 1. LCD screen
- 2. Power/Mode button
- 3. Adjustment dial
- 4. USB-C charging port
- 5. 1/4" 20 tripod mount

- 1. Estimated time remaining
- 2. Battery level indicator
- 3. Brightness level
- 4. Color temperature display
- 5. Color display
- 6. Scenes
- 7. Strobe
- 8. RGB levels

For detailed setup instructions go to lumecube.com/panel-pro